



H	Hot water
h1	Cold water
h2	Recirculation. An alternative way out of hot water or joining another boiler
h8	Drainage
h9	For immersion electric heater
h10,h12, h13	Connecting the control-adjusting and measuring fixtures
h14,h15	Connecting magnesium anode
h16,h17	Flanges for heat exchanger

V _{tank} , l	Dimensions, mm				Mounting dimensions, mm											
	H	ØD1	ØD	Ød	h1	h2	h8	h9	h10	h12	h13	h14	h15	h16	h17	
400	1730	700	600	450	331	1481	75	1231	681	1081	1481	781	-	456	906	
	1¼"				1¼"		¾"	1½"	½"		1"	Ø210				
500	1980	700	600	450	331	1731	75	1381	681	1231	1731	781	-	456	1031	
	1¼"				1¼"		¾"	1½"	½"		1"	Ø210				
750	2035	850	750	600	357	1757	75	1407	707	1257	1757	807	-	532	1057	
	1¼"				1¼"		¾"	1½"	½"		1"	Ø300				
1000	2085	950	850	700	390	1790	75	1440	740	1290	1790	840	-	565	1090	
	1½"				1½"		¾"	1½"	½"		1"	Ø300				
1500	2170	1100	1000	850	430	1830	75	1480	780	1330	1830	880	1380	605	1130	
	1½"				1½"		¾"	1½"	½"		1"	Ø300				
2000	2260	1300	1200	1000	471	1871	75	1521	821	1371	1871	921	1421	671	1171	
	2"				2"		1"	1½"	½"		1"	Ø350				
3000	2365	1500	1400	1150	526	1926	75	1576	876	1426	1926	976	1476	726	1226	
	2"				2"		1"	1½"	½"		1"	Ø350				
4000	2425	1700	1600	1300	557	1957	75	1607	907	1457	1957	1007	1507	757	1257	
	2"				2"		1"	1½"	½"		1"	Ø350				
5000	2925	1700	1600	1300	557	2457	75	1807	907	1770	2457	1007	1957	757	1507	
	2"				2"		1"	1½"	½"		1"	Ø350				
6300	2850	2100	1900	Configuration and size of pipes on request of the client												
8000	3600	2100	1900													
10000	4350	2100	1900													